


STEP ONE

Select the most effective base fiber and fiber treatment for your industry and application.

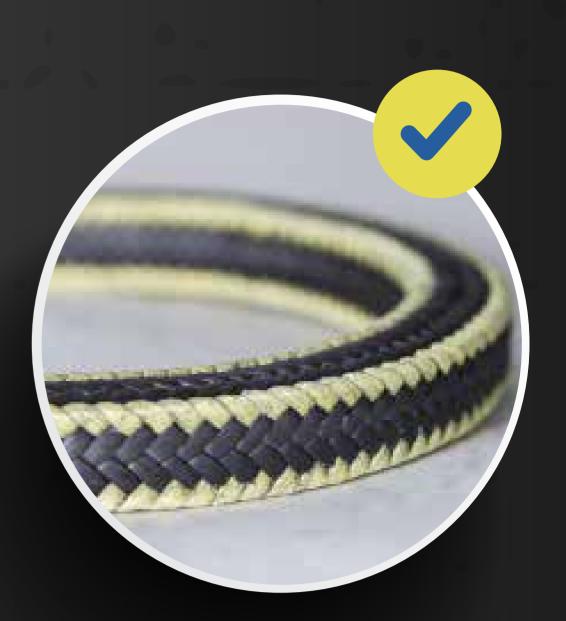






Criteria to consider

Pumps



temperature

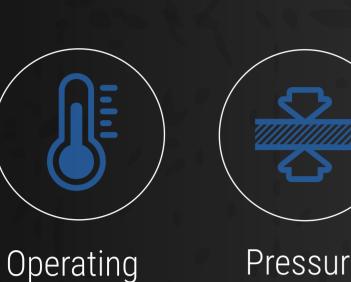





speed

pH range





temperature



Pressure

Valves





STEP TWO

Ensure that the packing is installed, correctly and the lantern ring is in the correct location.



Improperly seated o



Properly seated



Not using an installation tool may lead to packing that is not seated effectively and uneven ring loading.





Proper installation, using an installation tool, increases packing life and performance, allowing all the rings to be loaded effectively for more even sealing


STEP THREE

Flush and properly maintain the packing's operating environment according to the manufacturer's recommendations.



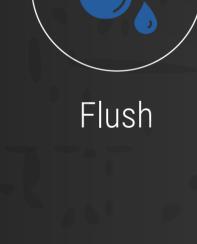

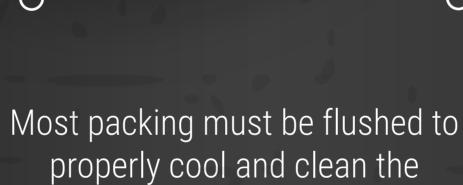

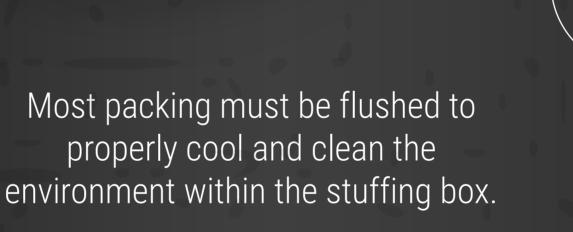


0



Maintain

If your operating parameters should change from those

used to select the packing, reevaluate the fiber and fiber treatment being used to determine if changes need to be made.

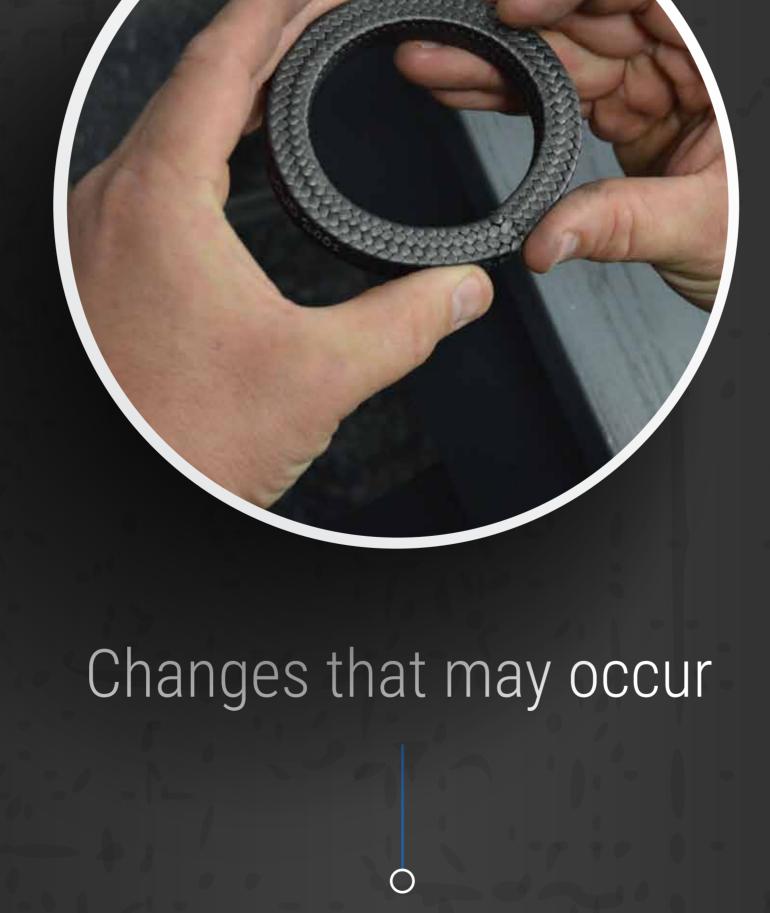




Flow

operation

Hours of

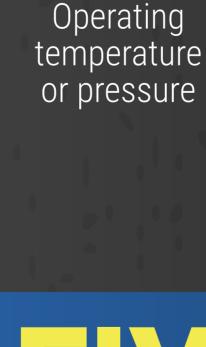



Material being

pumped

STEP FIVE

Replace the packing when the gland adjustment

is exhausted or if excess leaking occurs.





When the gland can no longer be tightened, the packing should be

replaced because it will

no longer seal effectively.



than 10 to 12 drops per

minute per inch of

©SEPCO 2019